


Parts List 5 – Fasteners

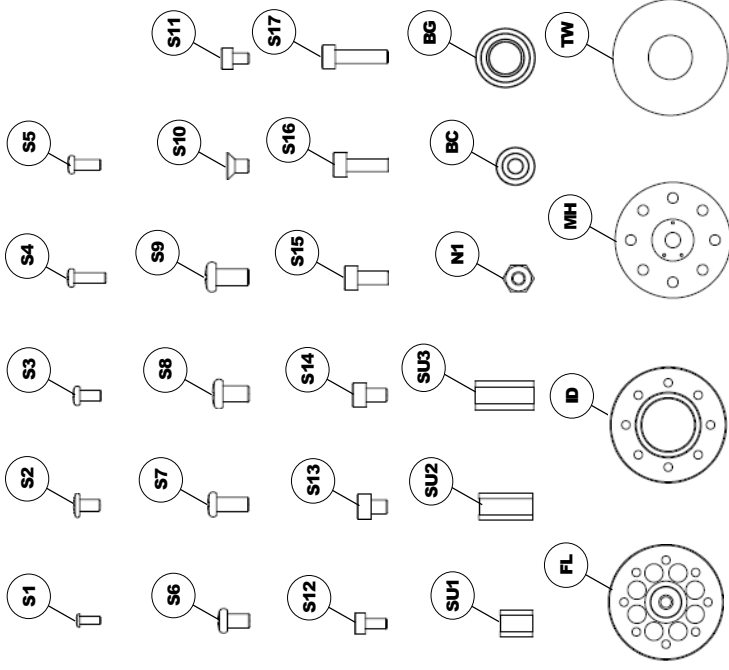


Part Number	Description	Qty.
S1	M1.4x4	6
S2	Button Head M2x4	2
S3	Phillips Head M2x4	22
S4	Phillips Head M2x5	16
S5	Phillips Head M2x6	20
S6	Phillips Head M2.5x4	12
S7	Phillips Head M2.5x6	4
S8	Phillips Head M3x4	8
S9	Phillips Head M3x6	8
S10	Flat Head M2.5x4	4
S11	Hex Head M2x3	28
S12	Hex Head M2x4	143
S13	Hex Head M2.5x3	8
S14	Hex Head M2.5x4	48
S15	Hex Head M2.5x6	112
S16	Hex Head M2.5x8	33
S17	Hex Head M2.5x10	8
SU1	Spacer M2.5x6	4
SU2	Spacer M2.5x10	3
SU3	Spacer M3x11	4
N1	Nut M2.5	92
BC	Bearing Cap	15
BG	Bearing	15
FL	Flange Bearing	4
ID	Bearing Idler	15
MH	Hom	20
TW	Thrust Washer	20

7

ROBOTIS

Parts List 5 – Fasteners

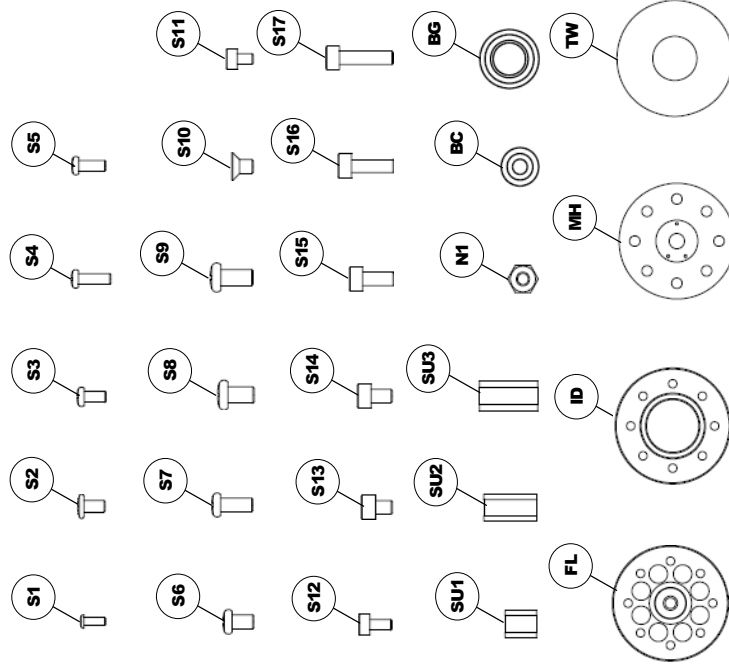

Part Number	Description	Qty.
S1	M1.4x4	6
S2	Button Head M2x4	2
S3	Phillips Head M2x4	22
S4	Phillips Head M2x5	16
S5	Phillips Head M2x6	20
S6	Phillips Head M2.5x4	12
S7	Phillips Head M2.5x6	4
S8	Phillips Head M3x4	8
S9	Phillips Head M3x6	8
S10	Flat Head M2.5x4	4
S11	Hex Head M2x3	28
S12	Hex Head M2x4	143
S13	Hex Head M2.5x3	8
S14	Hex Head M2.5x4	48
S15	Hex Head M2.5x6	112
S16	Hex Head M2.5x8	33
S17	Hex Head M2.5x10	8
SU1	Spacer M2.5x6	4
SU2	Spacer M2.5x10	3
SU3	Spacer M3x11	4
N1	Nut M2.5	92
BC	Bearing Cap	15
BG	Bearing	15
FL	Flange Bearing	4
ID	Bearing Idler	15
MH	Hom	20
TW	Thrust Washer	20

7

ROBOTIS