

## MX-28

### Parts Photo



[MX-28]

- Please note that the compliance setting for the control table 0x1A~0x1D has been changed to PID setting.

## H/W Specification

- MCU : ST CORTEX-M3 ( ST32F103C8 @ 72MHZ,32BIT)
- POSITION SENSOR : MAGNETIC POTENTIO METOR (12BIT,360 DEGREE)
- BAUD RATE : 8000 bps ~ 3 Mbps
- CONTROL ALGRITHM : PID CONTROL
- Resolution : 0.088°
- Running Degree
- 0° ~ 360°
- Endless Turn
- Weight : 72g
- Dimension : 35.6mm x 50.6mm x 35.5mm
- Gear Reduction Ratio : 193 : 1
- Stall Torque : 24kgf.cm (at 12V, 1.5A)
- No load speed : 54rpm (at 12V)
- Running Temperature : -5° ~ +80°
- Voltage : 9 ~ 16.8V (Recommended Voltage 12V)
- Command Signal : Digital Packet
- Protocol Type : Half duplex Asynchronous Serial Communication (8bit,1stop, No Parity)
- Link (Physical) : TTL Level Multi Drop (daisy chain type Connector)
- ID : 254 ID (0~253)
- Feedback : Position, Temperature, Load, Input Voltage, etc.
- Material : Full Metal Gear, Engineering Plastic Body
- Standby current : 100 mA

# Control Table

Control Table consists of data regarding the current status and operation, which exists inside of Dynamixel. The user can control Dynamixel by changing data of Control Table via Instruction Packet.

## EEPROM and RAM

Data in RAM area is reset to the initial value whenever the power is turned on while data in EEPROM area is kept once the value is set even if the power is turned off.

## Address

It represents the location of data. To read from or write data to Control Table, the user should assign the correct address in the Instruction Packet.

## Access

Dynamixel has two kinds of data: Read-only data, which is mainly used for sensing, and Read-and-Write data, which is used for driving.

## Initial Value

In case of data in the EEPROM Area, the initial values on the right side of the below Control Table are the factory default settings. In case of data in the RAM Area, the initial values on the right side of the above Control Tables are the ones when the power is turned on.

## Highest/Lowest Byte

In the Control table, some data share the same name, but they are attached with (L) or (H) at the end of each name to distinguish the address. This data requires 16bit, but it is divided into 8bit each for the addresses (low) and (high). These two addresses should be written with one Instruction Packet at the same time.

Area	Address (Hexadecimal)	Name	Description	Access	Initial Value (Hexadecimal)
E E P R O M	0 (0X00)	<a href="#">Model Number(L)</a>	Lowest byte of model number	R	29 (0X1D)
	1 (0X01)	<a href="#">Model Number(H)</a>	Highest byte of model number	R	0 (0X00)
	2 (0X02)	<a href="#">Version of Firmware</a>	Information on the version of firmware	R	-
	3 (0X03)	<a href="#">ID</a>	ID of Dynamixel	RW	1 (0X01)
	4 (0X04)	<a href="#">Baud Rate</a>	Baud Rate of Dynamixel	RW	34 (0X22)
	5 (0X05)	<a href="#">Return Delay Time</a>	Return Delay Time	RW	0 (0X0)
	6 (0X06)	<a href="#">CW Angle Limit(L)</a>	Lowest byte of clockwise Angle Limit	RW	0 (0X00)
	7 (0X07)	<a href="#">CW Angle Limit(H)</a>	Highest byte of clockwise Angle Limit	RW	0 (0X00)
	8 (0X08)	<a href="#">CCW Angle Limit(L)</a>	Lowest byte of counterclockwise Angle Limit	RW	255 (0XFF)
	9 (0X09)	<a href="#">CCW Angle Limit(H)</a>	Highest byte of counterclockwise Angle Limit	RW	15 (0X0F)
	11 (0X0B)	<a href="#">the Highest Limit Temperature</a>	Internal Limit Temperature	RW	80 (0X50)
	12 (0X0C)	<a href="#">the Lowest Limit Voltage</a>	Lowest Limit Voltage	RW	60 (0X3C)

	13 (0X0D)	<a href="#">the Highest Limit Voltage</a>	Highest Limit Voltage	RW	160 (0XA0)
	14 (0X0E)	<a href="#">Max Torque(L)</a>	Lowest byte of Max. Torque	RW	255 (0XFF)
	15 (0X0F)	<a href="#">Max Torque(H)</a>	Highest byte of Max. Torque	RW	3 (0X03)
	16 (0X10)	<a href="#">Status Return Level</a>	Status Return Level	RW	2 (0X02)
	17 (0X11)	<a href="#">Alarm LED</a>	LED for Alarm	RW	36 (0X24)
	18 (0X12)	<a href="#">Alarm Shutdown</a>	Shutdown for Alarm	RW	36 (0X24)
R A M	24 (0X18)	<a href="#">Torque Enable</a>	Torque On/Off	RW	0 (0X00)
	25 (0X19)	<a href="#">LED</a>	LED On/Off	RW	0 (0X00)
	26 (0X1A)	<a href="#">P Gain</a>	Proportional Gain	RW	32 (0X20)
	27 (0X1B)	<a href="#">I Gain</a>	Integral Gain	RW	0 (0X00)
	28 (0X1C)	<a href="#">D Gain</a>	Derivative Gain	RW	0 (0X00)
	30 (0X1E)	<a href="#">Goal Position(L)</a>	Lowest byte of Goal Position	RW	-
	31 (0X1F)	<a href="#">Goal Position(H)</a>	Highest byte of Goal Position	RW	-
	32 (0X20)	<a href="#">Moving Speed(L)</a>	Lowest byte of Moving Speed	RW	-
	33 (0X21)	<a href="#">Moving Speed(H)</a>	Highest byte of Moving Speed	RW	-
	34 (0X22)	<a href="#">Torque Limit(L)</a>	Lowest byte of Torque Limit	RW	ADD14
	35 (0X23)	<a href="#">Torque Limit(H)</a>	Highest byte of Torque Limit	RW	ADD15
	36 (0X24)	<a href="#">Present Position(L)</a>	Lowest byte of Current Position	R	-
	37 (0X25)	<a href="#">Present Position(H)</a>	Highest byte of Current Position	R	-

38 (0X26)	<a href="#">Present Speed(L)</a>	Lowest byte of Current Speed	R	-
39 (0X27)	<a href="#">Present Speed(H)</a>	Highest byte of Current Speed	R	-
40 (0X28)	<a href="#">Present Load(L)</a>	Lowest byte of Current Load	R	-
41 (0X29)	<a href="#">Present Load(H)</a>	Highest byte of Current Load	R	-
42 (0X2A)	<a href="#">Present Voltage</a>	Current Voltage	R	-
43 (0X2B)	<a href="#">Present Temperature</a>	Current Temperature	R	-
44 (0X2C)	<a href="#">Registered</a>	Means if Instruction is registered	R	0 (0X00)
46 (0X2E)	<a href="#">Moving</a>	Means if there is any movement	R	0 (0X00)
47 (0X2F)	<a href="#">Lock</a>	Locking EEPROM	RW	0 (0X00)
48 (0X30)	<a href="#">Punch(L)</a>	Lowest byte of Punch	RW	32 (0X20)
49 (0X31)	<a href="#">Punch(H)</a>	Highest byte of Punch	RW	0 (0X00)

# **Address Function Help**

## **EEPROM Area**

### **Model Number**

It represents the Model Number.

### **Firmware Version**

It represents the firmware version.

### **ID**

It is a unique number to identify Dynamixel.

The range from 0 to 253 (0xFD) can be used, and, especially, 254(0xFE) is used as the Broadcast ID.  
If the Broadcast ID is used to transmit Instruction Packet, we can command to all Dynamixels.

Please be careful not to duplicate the ID of connected Dynamixel.

## Baud Rate

It is the baud rate to communicate with controller. It is available in between 0~254(0XFE).

If the data value is in between 0~249 :

$$\text{Baudrate(BPS)} = 2000000 / (\text{Data} + 1)$$

Data	Set BPS	Target BPS	Tolerance
1	1000000.0	1000000.0	0.000 %
3	500000.0	500000.0	0.000 %
4	400000.0	400000.0	0.000 %
7	250000.0	250000.0	0.000 %
9	200000.0	200000.0	0.000 %
16	117647.1	115200.0	-2.124 %
34	57142.9	57600.0	0.794 %
103	19230.8	19200.0	-0.160 %
207	9615.4	9600.0	-0.160 %

If the data value is over the 250 :

Data	Set BPS	Target BPS	Tolerance
250	2250000.0	2250000.0	0.000 %
251	2500000.0	2500000.0	0.000 %
252	3000000.0	3000000.0	0.000 %



Note : Maximum Baud Rate error of 3% is within the tolerance of UART communication.

### **Return Delay Time**

It is the delay time per data value that takes from the transmission of Instruction Packet until the return of Status Packet.

0 to 254 (0xFE) can be used, and the delay time per data value is 2 usec.

That is to say, if the data value is 10, 20 usec is delayed. The initial value is 250 (0xFA) (i.e., 0.5 msec).

### **CW/CCW Angle Limit**

The angle limit allows the motion to be restrained.

The range and the unit of the value is the same as Goal Position(Address 30, 31).

- CW Angle Limit: the minimum value of Goal Position(Address 30, 31)
- CCW Angle Limit: the maximum value of Goal Position(Address 30, 31)

The following two modes can be set pursuant to the value of CW and CCW.

<b>Operation Type</b>	<b>CW / CCW</b>
Wheel Mode	the value of the both are 0
Joint Mode	the value of the both are not 0

The wheel mode can be used to wheel-type operation robots since motors of the robots spin infinitely.

The joint mode can be used to multi-joints robot since the robots can be controlled with specific angles.

### **The Highest Limit Temperature**

It is the highest limit of operating temperature.

The range for use is 10 to 99 (0x10~0x63). The unit is Celsius.

For example, if the value is 80, it is 80℃.

If the internal temperature of Dynamixel exceeds this range, Over Heating Error Bit (Bit2) of Status Packet is returned as '1' and Alarm is triggered as set in the addresses 17 and 18.

Caution : Do not set the temperature lower/higher than the default value.

When the temperature alarm shutdown occurs, wait 20 minutes to cool the temperature before re-use.

Using the product when the temperature is high may and can cause damage.

### **The Lowest (Highest) Limit Voltage**

It is the operation range of voltage.

50 to 250 (0x32 ~ 0x96) can be used. The unit is 0.1V.

For example, if the value is 80, it is 8V.

If Present Voltage (Address42) is out of the range, Voltage Range Error Bit (Bit0) of Status Packet is returned as '1' and Alarm is triggered as set in the addresses 17 and 18.

## Max Torque

It is the torque value of maximum output. 0 to 1023 (0x3FF) can be used, and the unit is about 0.1%.

For example, Data 1023 (0x3FF) means that Dynamixel will use 100% of the maximum torque it can produce while Data 512 (0x200) means that Dynamixel will use 50% of the maximum torque. When the power is turned on, Torque Limit (Addresses 34 and 35) uses the value as the initial value.

## Status Return Level

It decides how to return Status Packet. There are three ways like the below table.

Value	Return of Status Packet
0	No return against all commands (Except PING Command)
1	Return only for the READ command
2	Return for all commands

When Instruction Packet is Broadcast ID, Status Packet is not returned regardless of Status Return Level.

## Alarm LED

### Alarm Shutdown

Dynamixel can protect itself by detecting errors occur during the operation.

The errors can be set are as the table below.

Bit	Name	Contents
Bit 7	0	-
Bit 6	Instruction Error	When undefined Instruction is transmitted or the Action command is delivered without the reg_write command
Bit 5	Overload Error	When the current load cannot be controlled with the set maximum torque
Bit 4	Checksum Error	When the Checksum of the transmitted Instruction Packet is invalid
Bit 3	Range Error	When the command is given beyond the range of usage
Bit 2	OverHeating Error	When the internal temperature is out of the range of operating temperature set in the Control Table
Bit 1	Angle Limit Error	When Goal Position is written with the value that is not between CW Angle Limit and CCW

		Angle Limit
Bit 0	Input Voltage Error	When the applied voltage is out of the range of operating voltage set in the Control Table

It is possible to make duplicate set since the function of each bit is run by the logic of 'OR'. That is, if 0X05 (binary 00000101) is set, both Input Voltage Error and Overheating Error can be detected.

If errors occur, in case of Alarm LED, the LED blinks; in case of Alarm Shutdown, the motor output becomes 0 % by making the value of Torque Limit(Address 34, 35) as 0.

## RAM Area

### Torque Enable

Value	Meaning
0	Keeps Torque from generating by interrupting the power of motor.
1	Generates Torque by impressing the power to the motor.

## LED

Value	Meaning
0	Turn OFF the LED.
1	Turn ON the LED.

## PID Gain


MX series will use the PID controller as a main control method.

P gain refers to the value of proportional band.

I gain refers to the value of integral action.

D Gain refers to the value of derivative action.

Gains values are in between 0~254.

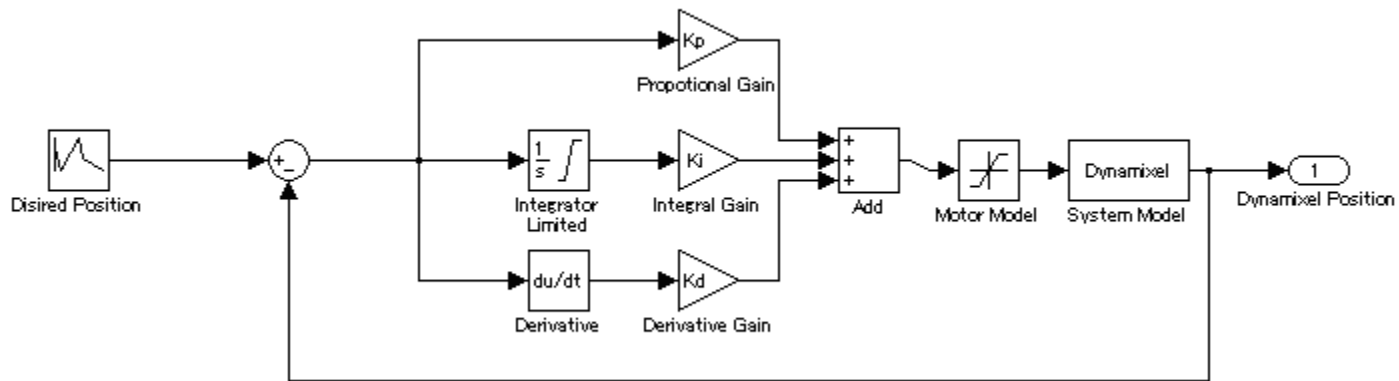

$$K_p = P \text{ Gain} / 8$$

$$K_i = I \text{ Gain} * 1000 / 2048$$

$$K_d = D \text{ Gain} * 4 / 1000$$

### Punch


Currently this value is not used.

### Goal Position

It is a position value of destination.

0 to 7095 (0xFF5) is available. The unit is 0.088 degree.

If Goal Position is out of the range, Angle Limit Error Bit (Bit1) of Status Packet is returned as '1' and Alarm is triggered as set in Alarm LED/Shutdown.

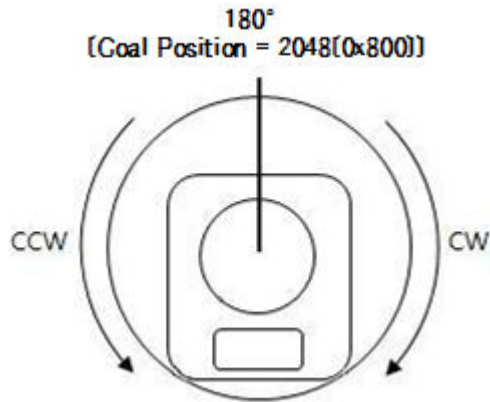

### **Moving Speed**

It is a moving speed to Goal Position.

0~1023 (0X3FF) can be used, and the unit is about 0.053rpm.

If it is set to 0, it means the maximum rpm of the motor is used without controlling the speed.

If it is 1023, it is about 54rpm.

For example, if it is set to 300, it is about 15.82 rpm.



Notes: Please check the maximum rpm of relevant model. Even if the motor is set to more than maximum rpm, it cannot generate the torque more than the maximum rpm.

### **Torque Limit**

It is the value of the maximum torque limit.

0 to 1023 (0x3FF) is available, and the unit is about 0.1%.


For example, if the value is 512, it is about 50%; that means only 50% of the maximum torque will be used. If the power is turned on, the value of Max Torque (Address 14, 15) is used as the initial value.

Notes: If the function of Alarm Shutdown is triggered, the motor loses its torque because the value becomes 0. At this moment, if the value is changed to the value other than 0, the motor can be used again.

## Present Position

It is the current position value of Dynamixel.

The range of the value is 0~4095 (0xFFF), and the unit is 0.088 degree.

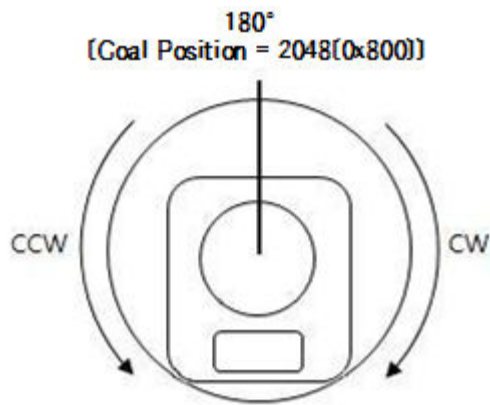

## Present Speed

Is the current moving speed.

0~2047 (0x000~0X7FF) can be used.

If a value is in the range of 0~1023 then the motor rotates to the CCW direction.

If a value is in the range of 1024~2047 then the motor rotates to the CW direction.

The 10th bit becomes the direction bit to control the direction; 0 and 1024 are equal.

The value unit is about 0.053rpm.

For example, if it is set to 300 then the motor is moving to the CCW direction at a rate of about 15.82rpm.

### Present Load

It means currently applied load.

The range of the value is 0~2047, and the unit is about 0.1%.

If the value is 0~1023, it means the load works to the CCW direction.

If the value is 1024~2047, it means the load works to the CW direction.

That is, the 10th bit becomes the direction bit to control the direction, and 1024 is equal to 0.

For example, the value is 512, it means the load is detected in the direction of CCW about 50% of the maximum torque.

BIT	15~11	10	9	8	7	6	5	4	3	2	1	0
Value	0	Load Direction	Data (Load Ratio)									

**Load Direction = 0 : CCW Load, Load Direction = 1: CW Load**

Notes: Current load is inferred from the internal torque value, not from Torque sensor etc.

For that reason, it cannot be used to measure weight or torque; however, it must be used only to detect which direction the force works.

### **Present Voltage**

It is the size of the current voltage supplied.

This value is 10 times larger than the actual voltage. For example, when 10V is supplied, the data value is 100 (0x64)

### **Present Temperature**

It is the internal temperature of Dynamixel in Celsius.

Data value is identical to the actual temperature in Celsius. For example, if the data value is 85 (0x55), the current internal temperature is 85°C.

### Registered Instruction

Value	Meaning
0	There are no commands transmitted by REG_WRITE
1	There are commands transmitted by REG_WRITE.

Notes: If ACTION command is executed, the value is changed into 0.

### Moving

Value	Meaning
0	Goal position command execution is completed.
1	Goal position command execution is in progress.

## Lock


Value	Meaning
0	EEPROM area can be modified.
1	EEPROM area cannot be modified.

Caution: If Lock is set to 1, the power must be turned off and then turned on again to change into 0.


## Option Frame(Old Model)

The types of MX-28 option frames are as follows.



**FR07-B1(OF-RX28B)**

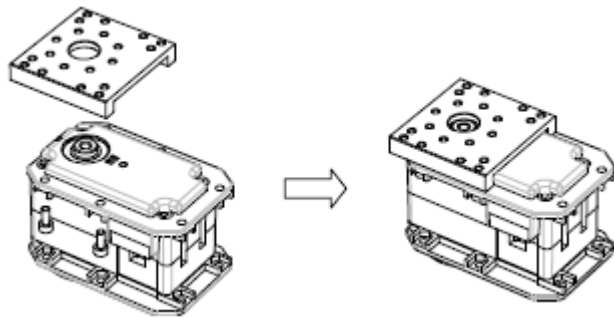

**FR07-H1(OF-RX28H)**

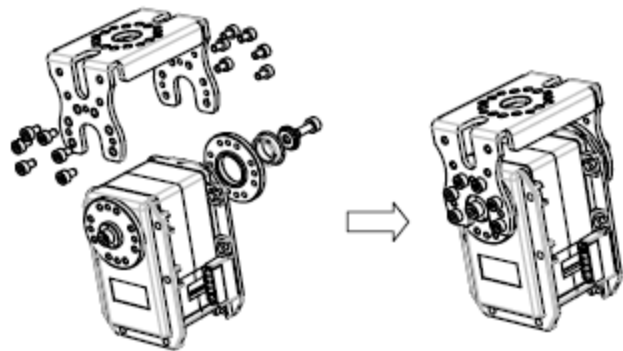

**FR07-S1(OF-RX28S)**

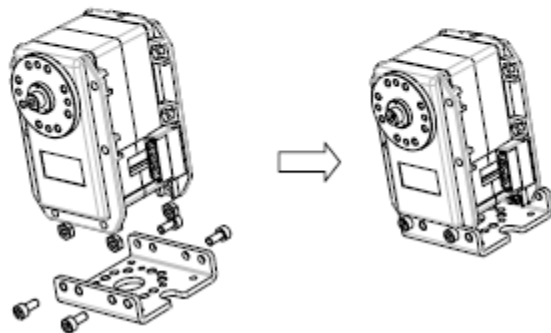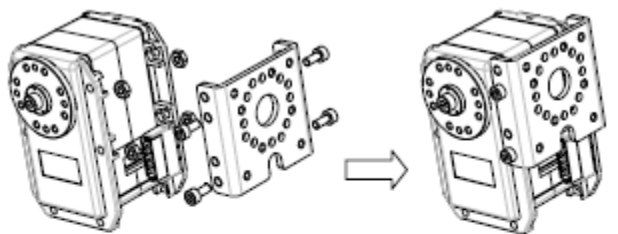




## **Horn (Old Model)**

The types of MX-28 Horns are as follows.


### **HN07-N1(Horn RX-28)**



### **HN07-11(Bearing Set RX-28H)**

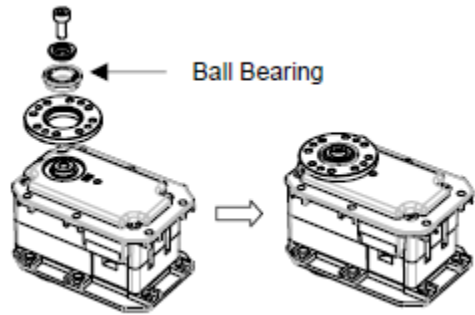


### HN07-T1(Horn 28T Set)

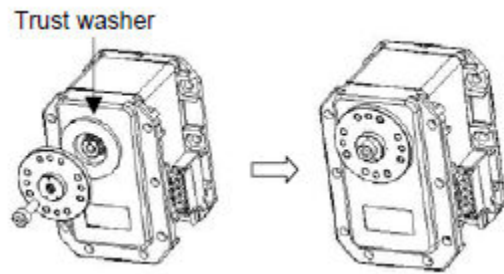

## **Combination**


The following example shows the combination structure of option frames and horns.

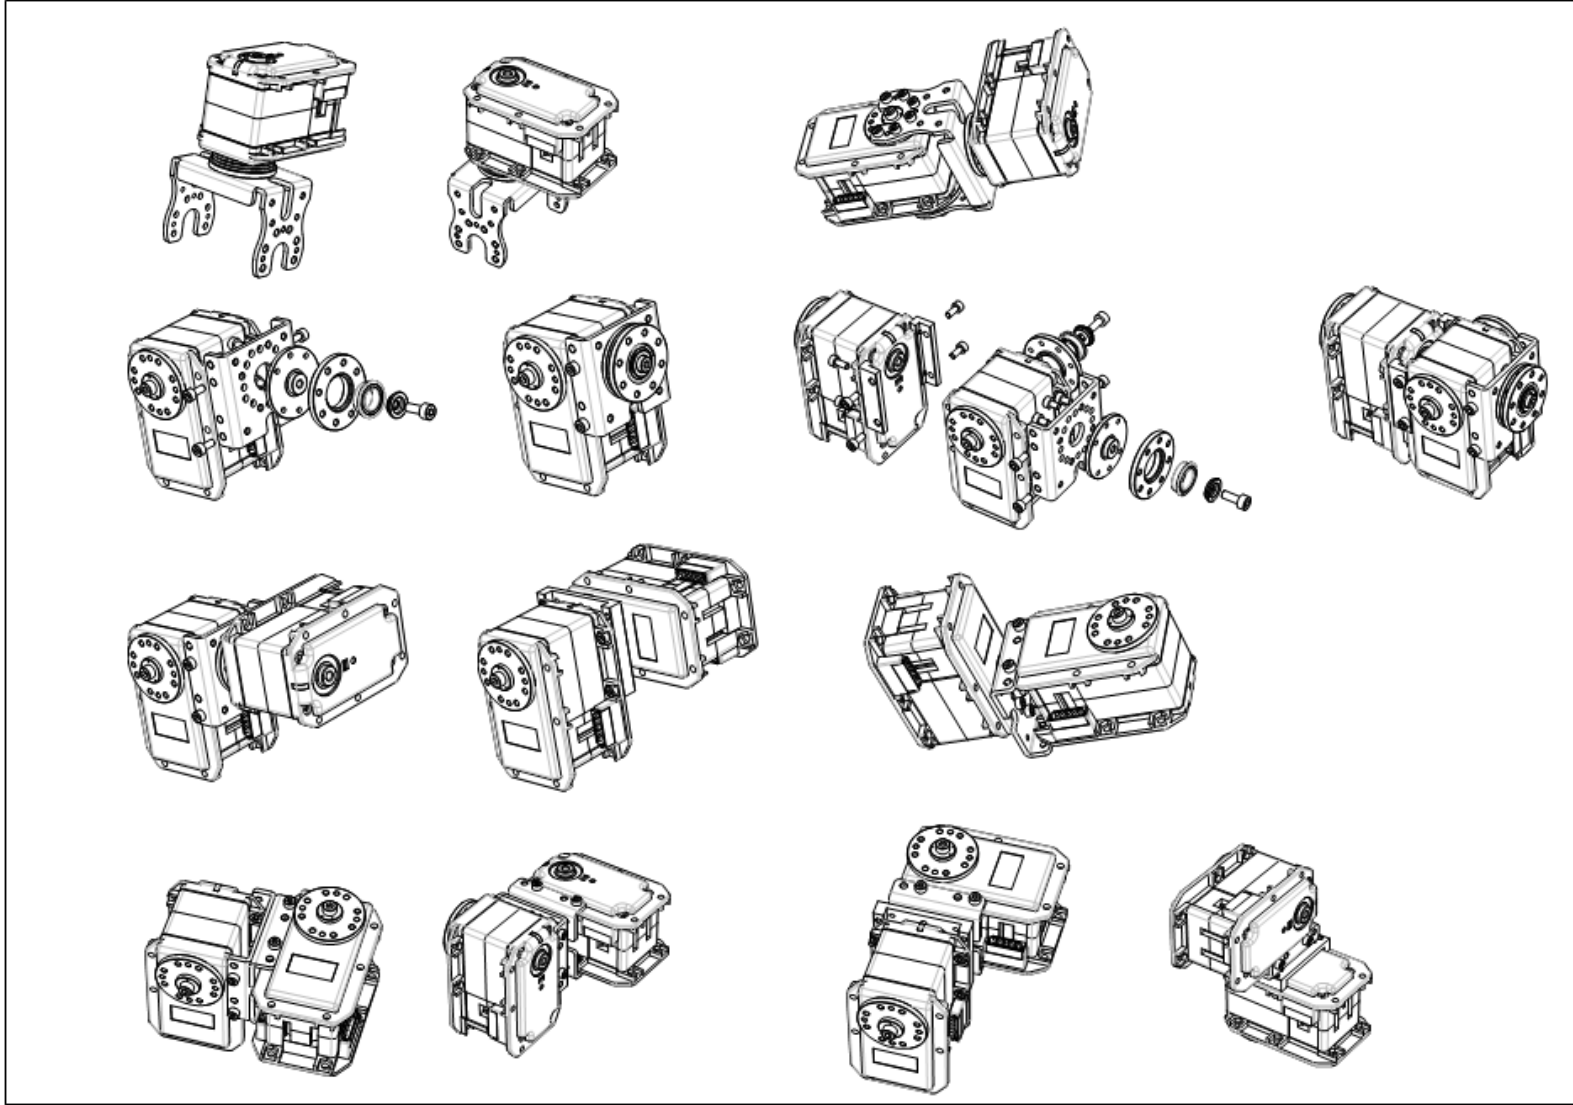


## Option Frame (New Model)

The types of MX-28 option frame are as follows.


### FR07-B101

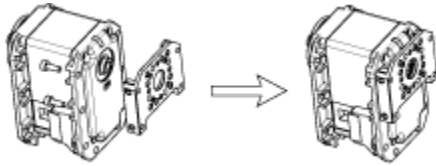


### FR07-F101\_FR07-X101

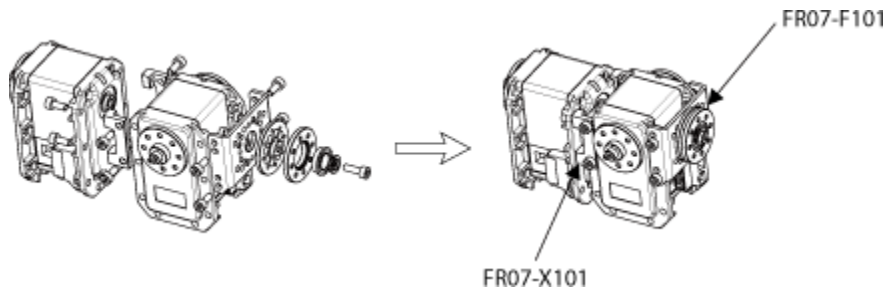

**FR07-H101**

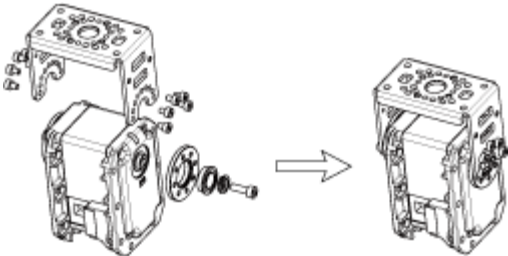


**FR07-S101**

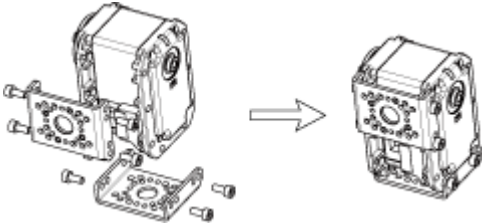

## Horn (New Model)

The types of MX-28 Horns are as follows.


**HN07-I101**

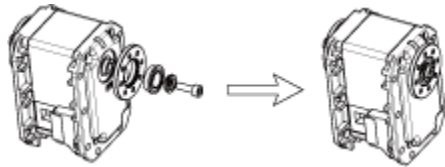

**HN07-N101**



**HN07-T101**

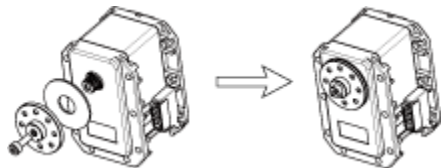

## Combination (New Model)

The following example shows the combination structure of option frames and horns.

